RT27, RT29, RT33, RT36

Refrigerator
user manual

imagine the possibilities

Thank you for purchasing this Samsung product.

Free Standing Appliance

SAMSUNG

Contents

SAFETY INFORMATION 2
SETTING UP YOUR REFRIGERATOR 12
OPERATING YOUR REFRIGERATOR 14
TROUBLESHOOTING 21

Safety information

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland – the authorized Service Person MUST hold a Gas Work Authorisation or Licence for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers. (For Australia only)

Important safety symbols and precautions :

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions carefully.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

These warning signs are here to prevent injury to you and others.
Please follow them carefully.
After reading this section, keep it in a safe place for future reference.

CE Notice

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC), RoHS Directive (2011/65/EU), Commission Delegated Regulation (EU) No 1060/2010 and the Eco-Design Directive(2009/125/EC) implemented by Regulation (EC) No 643/2009 of the European Union.
(For products sold in European Countries only)

⚠ WARNING SEVERE WARNING SIGNS FOR INSTALLATION

- Do not install the refrigerator in a damp place or place where it may come in contact with water.
- Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliance.
- Never use gas pipes, telephone lines or other potential lightening rods as ground.
- Improper use of the ground plug can result in electric shock.
- Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical which has a voltage rating that matched the rating plate.
- This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock of fire.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not bend the power cord excessively or place heavy articles on it.

- This refrigerator must be properly installed and located in accordance with the manual before it is used.
- Connect the power plug in proper position with the cord hanging down.
- If you connect the power plug upside down, wire can get cut off and cause fire or electric shock.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- This constitutes a fire hazard.
- Make sure that the power plug is not squashed or damaged by the back of the refrigerator.
- Keep the packing materials out of reach of children.
- There is a risk of death from suffocation if children put them on their head.
- The appliance must be positioned so that the plug is accessible after installation.

- The refrigerator must be grounded.
- You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.

- If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.
- The fuse on refrigerator must be changed by a qualified technician or service company.
- Failing to do so may result in electric shock or personal injury.

CAUTION SIGNS FOR INSTALLATION

- Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Allow the appliance to stand for 2 hours after installation.

WARNING SEVERE WARNING SIGNS FOR USING

- Do not insert the power plug with wet hands.
- Do not store articles on the top of the appliance.
- When you open or close the door, the articles may fall and cause personal injury and/or material damage.
- Do not put a container filled with water on the refrigerator.
- If spilled, there is a risk of fire or electric shock.
- Do not let children hang on the door.
  If not, a serious injury may occur.
- Do not let children enter inside of the refrigerator. There is a risk of children entrapment.
- Never put fingers or other objects into the dispenser hole.
- It may cause personal injury or material damage.
- Do not store volatile or flammable substances in the refrigerator.
- The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.
- Do not store pharmaceuticals products, scientific materials or temperature sensitive products in the refrigerator.
- Products that require strict temperature controls must not be stored in the refrigerator.
- Do not place or use electrical appliance inside the refrigerator, unless they are of a type recommended by the manufacturer.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.

- Do not disassemble or repair the refrigerator by yourself.
- You run risk of causing a fire, malfunction and/or personal injury.

- Children should be supervised to ensure that they do not play with the appliance.

- Bottles should be stored tightly together so that they do not fall out.
- This product is intended only for the storage of food in a domestic environment.
- If a gas leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
- Use only the LED Lamps provided by manufacturer or service agents.

- If you smell pharmaceutical or smoke, pull out power plug immediately and contact your Samsung Electronics service center.
- If you experience difficulty when changing the light, contact service agents.
- If the products equipped with LED Lamp,
  do not disassemble Lamp Cover and LED Lamp by yourself.
  - Please contact your service agents.

CAUTION SIGNS FOR USING

- To get Best performance of product,
  - Do not place foods too closely in front of the vents at the rear of the appliance as it can obstruct free air circulation in the refrigerator compartment.
  - Wrap the food up properly or place it in airtight containers before put it into the refrigerator.
- Fill water tank, ice tray, water cubes only with potable water.
- Do not apply strong shock or excessive force onto the surface of glass.
  - Broken glass may result in a personal injury and/or property damage.
- Be careful that your fingers are not caught in.

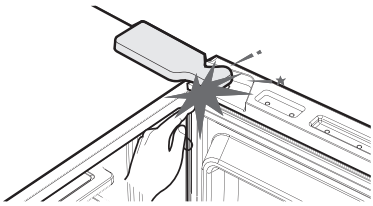

- If the refrigerator is damaged by water, pull out the power plug and contact your Samsung Electronics service center.

CAUTION SIGNS FOR CLEANING

- Do not directly spray water inside or outside the refrigerator.

- There is a risk of fire or electric shock.

- Do not spray inflammable gas near the refrigerator.

- There is a risk of explosion or fire.

- Do not spray cleaning products directly on the display.

- Printed letters on the display may come off.

- Remove any foreign matter or dust from the power plug pins.
  But do not use a wet or damp cloth when cleaning the plug, remove any foreign material or dust from the power plug pins.

- Otherwise there is a risk of fire or electric shock.

- Unplug the refrigerator before cleaning and making repairs.

SEVERE WARNING SIGNS FOR DISPOSAL

- When disposing of this or other refrigerators, remove the door/door seals, door latch so that small children or animals cannot become trapped inside.
  Children should be supervised to ensure that they do not play with the appliance.

- Please dispose of the packaging material for this product in an environmentally friendly manner.

- Leave the shelves in place so that children may not easily climb inside.
  Ensure that none of the pipes on the back of the

appliance are damaged prior to disposal.

- R-600a or R-134a is used as a refrigerant.
  Check the compressor label on the rear of the appliance or the rating label inside the refrigerator to see which refrigerant is used for your refrigerator.
  When this product contains flammable gas (Refrigerant R-600a), contact your local authority in regard to safe disposal of this product.
  Cyclopentane is used as a insulation blowing gas.
  The gases in insulation material require special disposal procedure.
  Please contact your local authorities in regard to the environmentally safe disposal of this product.
  Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.
  The pipes shall be broke in the open space.
- If the appliance contains iso-butane refrigerant (R-600a), a natural gas with high environmental compatibility that is, however, also combustible.
  When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Refrigerant squirting out of the pipes could ignite or cause an eye injury.
  If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.
  Never start up an appliance showing any signs of damage.
  If in doubt, consult your dealer.
  The room must be 1 m^3 in size for every 8 g

of R-600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

ADDITIONAL TIPS FOR PROPER USAGE

- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.
- Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.
- If the key is provided with refrigerator, the keys should be kept out of the reach of children and not in vicinity of the appliance.
- The appliance might not operate consistently (possibility of temperature becoming too warm in refrigerator) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- Do not store food which spoils easily at low temperature, such as bananas, melons.
- Your appliance is frost free, which means there is no need to manually defrost your appliance, as this will be carried out automatically.
- The temperature of two star section (sections) or compartment (compartments) which have two star symbol (**) is slightly higher than other freezer compartment (compartments). The two star section (sections) or compartment (compartments) is (are) based on the instruction and/ or the condition as delivered.

Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation.
  Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (radiator, for example).
- Never block any vents or grilles on the appliance.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw.
  You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the appliance open for too long when putting food in or taking food out.
  The shorter time for which the door is open, the less ice will form in the freezer.
- Clean the rear of the refrigerator regularly.
  Dust increases energy consumption.
- Do not set temperature colder than necessary.
- Ensure sufficient air exhaust at the refrigerator base and at the back wall of the refrigerator.
  Do not cover air vent openings.
- Allow clearance to the right, left, back and top when installing.
  This will help reduce power consumption and keep your energy bills lower.
- For the most efficient use of energy, please keep the all inner fittings such as baskets, drawers, shelves on the position supplied by manufacturer.

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

Setting up your refrigerator

GETTING READY TO INSTALL THE REFRIGERATOR

Congratulations on your purchase of this Samsung Refrigerator.
We hope you enjoy the state-of-art features and efficiencies that this new appliance offers.

WARNING

- This refrigerator must be properly installed and located in accordance with the manual before it is used.
- Use this appliance only for its intended purpose as described in this instruction manual.
- We strongly recommend that any servicing be performed by a qualified individual.
- Please dispose of the packaging material for this product in an environmentally friendly manner.
- Pull the power plug out of the socket before changing the interior light of the refrigerator.
  - Otherwise, there is a risk of electric shock.

Selecting the best location for the refrigerator

- Select a location without direct exposure to sunlight.
- Select a location with level (or nearly level) flooring.
- Select a location with enough space for the refrigerator doors to open easily.
- Allow sufficient space to install the refrigerator on a flat surface.
  - If your refrigerator is not level, the internal cooling system may not work correctly.
  - Overall space required in use.
    Refer to drawing and dimension as below.

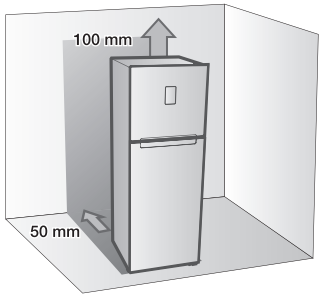

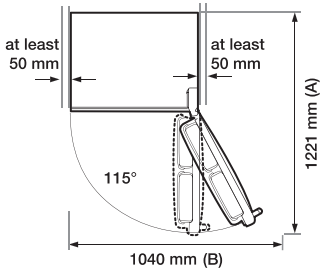

The figure above shows a RT36*.

Model	A	B
RT27	1141	964
RT29	1141	964
RT33	1221	1040
RT36	1221	1040

Allow sufficient space to the right, left, back and top for air circulation.
This will help reduce power consumption and keep your energy bills lower.
Do not install the refrigerator where the temperature will go below 10 °C.
Please ensure that appliance can be moved freely in the event of maintenance & service.

CAUTION When installing, servicing, or cleaning behind the refrigerator, be sure to pull the unit straight out and push back in straight after finishing.
Also, make sure your floor supports the full-load refrigerator.
Otherwise, it may cause floor damage.

CAUTION Please tie up the extra length of the power cord at the back of the refrigerator so as not to be touched on the floor preventing the power cord from being crushed by the rollers upon relocation.

Flooring

For proper installation, this refrigerator must be placed on a level surface of hard material that has the same height as the rest of the flooring.
This surface should be strong enough to support a fully loaded refrigerator (or approximately 100 kg).
To protect the floor finish, cut a large section of the cardboard carton and place it under the refrigerator where you are working.

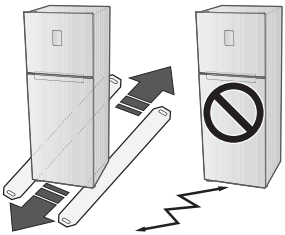

Pulling or pushing the refrigerator may damage the floor.
Moving the refrigerator after installation may damage the floor.

LEVELLING THE REFRIGERATOR

If the front of the appliance is slightly higher than the rear, the door can be opened and closed more easily.

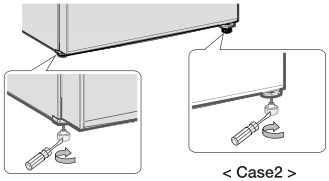

< Case1 > < Case2 >

Case 1) The appliance tilts down to the left.
- Turn the left adjusting leg in the direction of the arrow until the appliance is level.

Case 2) The appliance tilts down to the right.
- Turn the right adjusting leg in the direction of the arrow until the appliance is level.

SETTING UP THE REFRIGERATOR

Now that you have your new refrigerator installed and in place, you are ready to set up and enjoy the full features and functions of the appliance.
By completing the following steps, your refrigerator should be fully operational.
If not, first check the power supply and electricity source or try the troubleshooting section at the back of this user guide.
If you have any further questions, contact your Samsung Electronics service center.

1. Place the refrigerator in an appropriate location with reasonable clearance between the wall and the refrigerator.
   Refer to installation instructions in this manual.
2. Once the refrigerator is plugged in, make sure the interior light comes on when you open the doors.

Set the temperature control to the coldest temperature and wait for an hour.
The freezer should get slightly chilled and the motor should run smoothly.
After powering the refrigerator, it will take a few hours to reach the appropriate temperature.
Once the refrigerator temperature is sufficiently cool, you can store food and drink in the refrigerator.

USING THE CONTROL PANEL (DISPLAY TYPE)

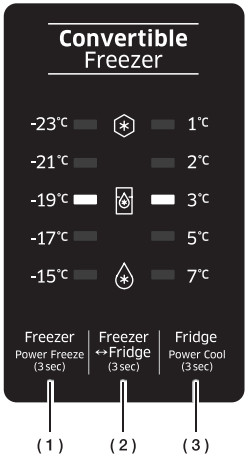

Each time you press the button, a short beep will sound.

Temperature will be set after 10 sections after press the each button.

(1) Freezer

1. Freezer
- Press the Freezer button to set the freezer to desired temperature from the range between -15 °C and -23 °C.
  Default set temperature is set on -19 °C and each time you press the Freezer button, temperature will change in following order and temperature indicator will display the desired temperature.

-23 °C → -15 °C → -17 °C → -19 °C → -21 °C

2. Power Freeze
- When you press the Freezer button for 3 seconds the indicator will light up and the refrigerator will speed up the time to needed to freeze products in the freezer.

When you use the Power Freezer function, the cooling of the refrigerator will be speeded up for several hours.
When you use this function, the energy consumption will increase.
To deactivate this function, press the Freezer button for 3 seconds.

(2) Freezer ↔ Fridge (3 sec)

When you press this button for 3 seconds to convert the freezer room into the fridge room and the freezer display will be off.
When you use this function, you can not use Power Freezer function.
To deactivate this function, press this button for 3 seconds.

WARNING **Danger of explosion**
When you cancel this function, glass bottle containing liquids that can freeze should never be stored in the freezer room.

When you use freezer room to convert to fridge mode, we recommend to keep the food stuff (Especially vegetable) with using plastic container or box.

(3) Fridge

1. Fridge
- Press the Fridge button to set the fridge to desired temperature from the range 1 °C to between 1 °C and 7 °C.
  Default set temperature is set on 3 °C and each time you press the Fridge button, temperature will changing following order and temperature indicator will display the desired temperature.

1 °C — 7 °C — 5 °C — 3 °C — 2 °C

2. Power Cool
- When you press the Fridge button for 3 seconds the indicator will light up and the refrigerator will speed up the time.

If you need to freeze large amount of food stuff, activate Power Freezer function at least 24 hours before.

Adjusting the Fridge Temperature

If the food in the refrigerator is not as cold as you would like or if you wish to lower the temperature of the refrigerator, set temperature on 1 °C.
If food in the refrigerator is frozen or if you wish to increase the temperature of the freezer, set temperature from range between 3 °C and 7 °C.

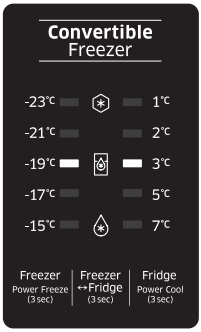

- If the room temperature is lower than 10 °C, do not set temperature from range between 5 °C and 7 °C.
  Otherwise there may be problems with the refrigerator's performance.
- When the room temperature is higher than 35 °C, set temperature from range between 1 °C and 2 °C.
  Otherwise there may be problems with the refrigerator's performance.

MAKING ICE (OPTIONAL)

Twist Ice Maker

Making Ice Cubes

Remove the ice cube tray by pulling it towards you.
Fill the tray with water up to the maximum water level marked on the rear of the tray.
Slide the tray back into the holder, taking care not to spill the water.
Wait until the ice cubes are formed.

Removing the Ice Cubes

Make sure that the ice cube storage bin is in place under the ice cube tray.
If not, slide it into place.

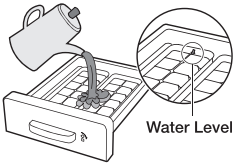

Twist one of the levers firmly in the clockwise direction until the tray twists slightly.

Result : The ice cubes fall into the storage bin.

Repeat Step 2 for the other half of the tray, if necessary. Remove the storage bin by:

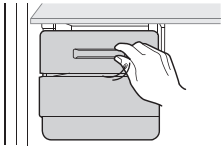

- Lifting it slightly
- Pulling it towards you

CAUTION

Danger of explosion

Glass bottles containing liquids that can freeze should never be stored in the freezer as the glass will explode when the contents freeze.

Tray Type (Optional)

Making Ice Cubes

Fill up the ice tray with water and that till it reaches the maximum level mark on the rear of the tray.
Put the ice tray in the freezer.

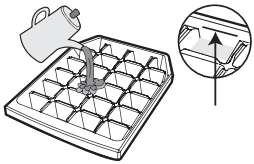

Removing the ice cubes

Hold both ends of the ice tray, remove the ice cubes from the tray by twisting it gently.

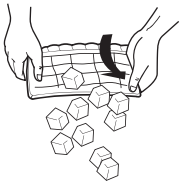

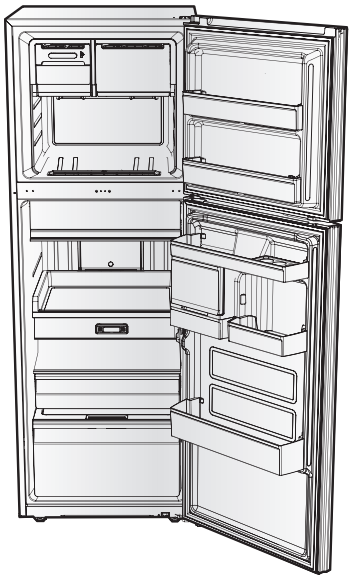

Some parts in the picture may differ from your refrigerator, depending of the model and option (for example ice tray, twice ice maker, cool pack,or shelf).

WARNING

- If you plan to go away for a significant time, empty the refrigerator and turn it off.
  Wipe the excess moisture from the inside of the appliance and leave the doors open.
  This helps keep odour and mold from developing.
- If the refrigerator is not to be used for a long period of time, pull out the power plug.

- To get more space in the freezer compartment, you can remove applicable fitting(s) such as cool pack(s), shelf(s), twist Ice maker(s), ice storage bin(s) and their supporter(s) which can be removed without aid of a tool.
  It does not affect thermal and mechanical characteristics.
  A declared storage volume of freezer compartment is calculated with above things removed.
- If you want to remove both ice maker kits, you have to remove right one first.
  (only for Ice Max option model)
- To get the best energy efficiency of this product, please leave all selves, drawers and baskets on their original position like as 17 page illustration.
- The lower guard of the freezer compartment is only two star section.
  So, the lower guard shall be placed on the original position for proper performance.
- The Alarm function of the display model works when door of the fridge is open.
  Please also check if the freezer door is closed, because alarm does not ring when the freezer door is opened.
  In the case of a non-display model, the alarm does not ring even if the doors of the fridge and the freezer are open.
  Check if the doors are closed.

REMOVING THE REFRIGERATOR ACCESSORIES

CAUTION While assembling, put the freezer shelf, refrigerator shelves and cool pack in the correct position and do not put them upside down.
It may cause a personal injury or material damage.

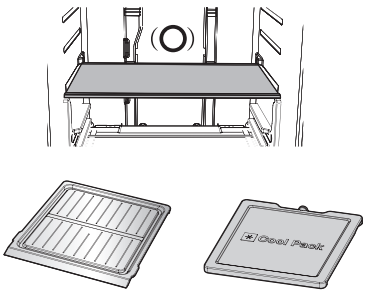

1. Pull out the ice tray and box and then pull out the right side of support tray ice.
   Same steps to left side.
   (Only for ice max option model)

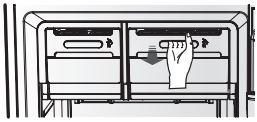

CAUTION
- Be careful when you pull out the ice tray support because it will protrude up to you suddenly.
- Be careful when you disassemble and assemble the ice tray support because the upper side of it has a sharp edge. It may occur finger injury.

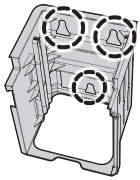

To assemble, place the ice tray support above the slots with the right side higher. Hold it underneath in the middle and push the ice tray support until it snaps into place.

2. Lift up the freezer shelf or cool pack and pull it forward and then pull out the ice tray and box. Pull out the support tray ice.
   (Only for freezer shelf or cool pack option model)

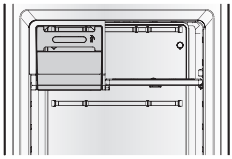

3. Remove ice tray and then lift up the freezer shelf, and pull it forward.
   (Only for ice tray option model)

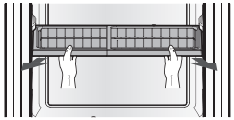

4. Pull the the refrigerator shelves towards you.

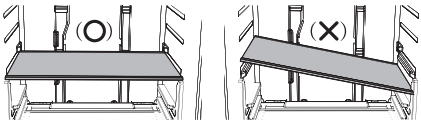

- To remove the refrigerator shelves when it is possible to open the doors widely, pull the shelves forward, lift them up and then pull out.
- To remove the refrigerator shelves when it is impossible to open the doors widely, pull the shelves forward, lift them up and tilt in order to pull them out.
- When you put the shelves back, make sure the side with the label “Front” on it face the front of the refrigerator.

5. Pull it out while pressing the end of the sill on the low temperature catalyzing deodorizer.

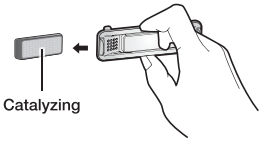

6. Lift up and pull out the door guards.

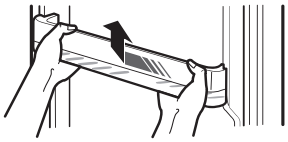

Before removing any accessories, make sure that no food is in the way.
When possible, remove the food altogether to reduce the risk of accidents.

CLEANING THE REFRIGERATOR

WARNING

- Do not use Benzene, Thinner or Clorox™ for cleaning.
  They may damage the surface of the appliance and can create a risk of fire.
- Do not spray the refrigerator with water while it is plugged in, as it may cause an electric shock. Do not clean the refrigerator with benzene, thinner or car detergent for risk of fire.

1. Unplug the power cord of the refrigerator.
2. Slightly dampen a soft lint-free cloth or paper towel with water.

Do not use any kind of detergent to clean the refrigerator because that can discolor or damage the refrigerator.

3. Wipe the inside and outside of refrigerator until it is clean and dry.
4. Plug the power code of the refrigerator.

REPLACING THE INTERIOR LIGHT

For LED lamp, please contact service engineer to replace it.

Troubleshooting

PROBLEM	SOLUTION
The appliance is not operating at all or the temperature is too high.	• Check if the power plug is correctly connected. • Is the temperature control on the front panel correctly set? • Is the appliance in direct sunlight or located near a heat source? If so, it may not be able to cool as well. Please put it in a place that is out of direct sunlight and not near a heat source. • Is the back of the appliance too close to the wall? If so, it may not be able to cool sufficiently. Keep it an appropriate distance from the wall. • Is there too much food inside so that the food is blocking the outlet vent? To keep the refrigerator at a suitable temperature, do not fill the refrigerator with too much food.
The food in the refrigerator is frozen.	• Is the temperature control on the front panel set to the coldest temperature? • Is the surrounding temperature too low? • Did you store the food with a high water content in the coldest part of the fridge?
There are unusual noises.	• Check that the appliance is installed on a stable, level floor. • Is the back of the appliance too near to the wall? • Have any foreign objects fallen behind or under the appliance? • Is the noise coming from the compressor in the appliance? • A ticking sound may be heard inside the appliance; this is normal. This sound occurs when the various accessories contract or expand.
The front corners and sides of the appliance are warm and condensation starts to form.	• Heat-proof pipes are installed in the front corners of the appliance to prevent condensation from forming. When the surrounding temperature rises, this may not always be effective. However, this is not abnormal. • In very humid weather, condensation may form on the outer surface of the appliance when the moisture in the air comes into contact with the cool surface of the appliance.
Ice Maker is not producing ice.	• Did you wait for 12 hours after installation of the refrigerator before making ice? • Did you manually stop the ice making function? • Is the freezer temperature too warm? Try setting the freezer temperature lower. • Did you fill the water tank with water? • Did you check fitting the water tank correctly ?
Water dispenser is not functioning.	• Is the water tank frozen because the fridge temperature is too low? Try selecting a warmer setting on the Digital display. • Did you fill with water in water tank? • Did you check fitting the water tank correctly ?

PROBLEM	SOLUTION
You can hear a liquid bubbling in the appliance.	• This is the refrigerant, which cools the inside of the appliance.
There is a bad smell inside the appliance.	• Has a food item spoiled? • Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. • Clean out your Freezer periodically and throw away any spoiled food. When cleaning the inside of the fridge, store food elsewhere and unplug the appliance. Wipe with a dry dishcloth after 2-3 hours and then circulate air inside the refrigerator.
There is a layer of frost on the appliance walls.	• Are the air outlet vents blocked by food stored inside the refrigerator. • Space the food out as much as possible to improve ventilation. • If the freezer drawer is not completely closed or is blocked, humidity from outside may enter and cause severe frost to form.
Condensation forms on the inside wall of the appliance and around vegetables.	• Food with a high water content is stored uncovered with a high humidity level or the door has been left open for a long time. • Store the food with a cover or in sealed containers.

Ambient Room Temperature Limits

This refrigerator is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperature range (°C)	
		IEC 62552 (ISO 15502)	ISO 8561
Extended Temperate	SN	+10 to +32	+10 to +32
Temperate	N	+16 to +32	+16 to +32
Subtropical	ST	+16 to +38	+18 to +38
Tropical	T	+16 to +43	+18 to +43

Internal temperatures may be affected by such factors as the location of the refrigerator, ambient temperature and the frequency with which you open the door.
Adjust the temperature as required to compensate for these factors.

English

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For more information on safe disposal and recycling, visit our web site www.samsung.com or contact our Helpline numbers on below contact SAMSUNG WORLD WIDE.

SAMSUNG

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	Web site
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support

RT27, RT29, RT33, RT36

रेफ़्रिजरेटर

उपयोगकर्ता मार्गदर्शिका

संभावनाओं की कल्पना करें

यह Samsung उत्पाद खरीदने के लिए धन्यवाद।

फ़्री स्टैंडिंग उपकरण

सामग्रियाँ

सुरक्षा जानकारी 2
अपने रेफ़्रिजरेटर को सेट करना 12
आपके रेफ़्रिजरेटर का संचालन 14
समस्या-निवारण 20

सुरक्षा जानकारी

सुरक्षा जानकारी

- उपकरणों के संचालन से पहले, कृपया इस मैनुअल को अच्छी तरह पढ़ें और अपने संदर्भ के लिए इसे अपने पास रखें।
- इस उपकरण का उपयोग इस निर्देश पुस्तिका में वर्णित नियत उद्देश्य के लिए ही करें। यह उपकरण कम शारीरिक, संवेदी या मानसिक क्षमताओं वाले, या अनुभव और ज्ञान की कमी वाले व्यक्तियों द्वारा (बच्चों सहित) उपयोग के लिए नहीं है, जब तक कि उनकी सुरक्षा के लिए जिम्मेदार किसी व्यक्ति द्वारा उपकरण के उपयोग के बारे में पर्यवेक्षण या निर्देश दिया गया हो।
- इस उपकरण का उपयोग 8 साल या उससे बड़े बच्चों तथा क्षीण शारीरिक, संवेदक या मानसिक क्षमताएँ या कम अनुभव एवं ज्ञान वाले व्यक्तियों द्वारा किया जा सकता है बशर्ते कि उन्हें उपकरण को सुरक्षित तरीके से उपयोग से जुड़े पर्यवेक्षण या निर्देश प्रदान किए गए हैं और वे इससे उत्पन्न ख़तरों को समझते हैं। बच्चों को उपकरण के साथ नहीं खेलने देना चाहिए। पर्यवेक्षण के बिना बच्चों को सफाई और उपयोगकर्ता रखरखाव नहीं करना चाहिए।
- क्योंकि निम्नलिखित संचालन निर्देश विभिन्न मॉडलों को आवृत करते हैं, आपके रेफ़्रिजरेटर की विशेषताओं इस पुस्तिका में वर्णित से थोड़ी अलग हो सकती है।

- इस उपकरण की मरम्मत करने के लिए अधिकृत सेवा व्यक्ति के अलावा यह अन्य किसी के लिए भी खतरनाक है। क्वींसलैंड में - अधिकृत सेवा व्यक्ति के लिए ऐसी सर्विसिंग या मरम्मत करने हेतु, जहाँ कवर को हटाना शामिल हो, हाइड्रोकार्बन रेफ्रिजरेंट के लिए गैस कार्य प्राधिकार या लाइसेंस धारण करना ज़रूरी है। (केवल ऑस्ट्रेलिया के लिए)

महत्वपूर्ण सुरक्षा प्रतीक और सावधानियाँ:

चेतावनी	खतरे या असुरक्षित व्यवहार जिनसे व्यक्ति को **गंभीर चोट लग सकती है या मृत्यु हो सकती है।**
सावधानी	खतरे या असुरक्षित व्यवहार जिनसे **हल्की निजी चोट लग सकती है या संपत्ति की क्षति हो सकती है।**

	इसका प्रयास न करें।
	इसे खोलें नहीं।
	इसे स्पर्श न करें।
	निर्देशों का सावधानीपूर्वक पालन करें।
	दीवार के सॉकेट से बिजली के प्लग को निकाल दें।
	बिजली के झटके से बचने के लिए सुनिश्चित करें की मशीन स्थिर है।
	सहायता के लिए संपर्क केंद्र पर कॉल करें।
	नोट।

ये चेतावनी चिह्न यहाँ आपको तथा अन्य लोगों को चोट से बचाने के लिए हैं।
कृपया उनका ध्यानपूर्वक अनुसरण करें।
इस अनुभाग को पढ़ने के बाद, इसे भावी संदर्भ के लिए किसी सुरक्षित स्थान में रखें।

CE सूचना

यह उत्पाद यूरोपीय संघ (EC) विनियम सं. 643/2009 द्वारा कार्यान्वित निम्न वोल्टेज निर्देश (2006/95/ EC), विद्युत-चुंबकीय संगतता निर्देश (2004/108/EC), RoHS निर्देश (2011/65/ EU), आयोग प्रदत्त विनियम (EU) सं. 1060/2010 और पर्यावरण-प्रारूप निर्देश (2009/125/EC) के अनुपालन में निर्धारित हुआ है।
(केवल यूरोपीय देशों में बेचे गए उत्पादों के लिए)

⚠ चेतावनी स्थापना के लिए गंभीर चेतावनी चिह्न

- रेफ्रिजरेटर को नम जगह पर या ऐसी जगह पर स्थापित न करें जहाँ वह पानी के संपर्क में आ सकता है।

- विद्युतीय हिस्सों में खराब विद्युत-रोधन के कारण बिजली के झटके या आग लग सकती है।

- इस रेफ्रिजरेटर को सीधे सूर्यप्रकाश में या स्टोव, रूम हीटर या अन्य उपकरणों की गर्मी के संपर्क में न रखें।

- गैस पाइप, टेलीफोन लाइन या अन्य संभावित बिजली-संवाहकों का उपयोग ग्राउंड की तरह कभी न करें।

- ग्राउंड प्लग के अनुचित उपयोग के कारण बिजली के झटके लग सकते हैं।

- कई उपकरणों के प्लग एक ही मल्टीपल पॉवर बोर्ड पुर ना लगाएँ।
  रेफ्रिजरेटर को हमेशा स्वयं उसके व्यक्तिगत इलेक्ट्रिकल पॉइंट में प्लग करना चाहिए जिसका वोल्टेज रेटिंग, रेटिंग प्लेट से मेल खाता हो।

- इससे सर्वश्रेष्ठ कार्य-निष्पादन मिलता है और इससे घर का वायरिंग सर्किट ओवरलोड होने से भी बचता है, जिससे अत्यधिक गर्म तारों से आग का खतरा हो सकता है।

- यदि दीवार का सॉकेट ढीला हो, तो उसमें पावर प्लग न लगाएँ।

- इससे बिजली के झटके या आग का जोखिम होता है।

- ऐसे किसी तार का उपयोग न करें जिसकी पूरी लंबाई या किसी छोर में दरारें या घर्षण क्षति नजर आ रही हो।

- बिजली के तार को अधिक न मोड़ें या इस पर कोई भारी चीज न रख दें।

• यह रेफ़्रिजरेटर उचित तरीके से स्थापित किया जाना चाहिए और उपयोग से पूर्व पुस्तिका के अनुसार अवस्थित होना चाहिए।

• तार को नीचे लटकाकर बिजली के प्लग को उचित स्थिति में कनेक्ट करें।

- अगर आप बिजली के प्लग को उल्टा लगाते हैं, तो तार कट सकता है और आग या बिजली का झटका लग सकता है।

• रेफ़्रिजरेटर का स्थान बदलने के दौरान, बिजली के तार को क्षतिग्रस्त न होने दें।

- इससे आग का जोखिम हो सकता है।

• रेफ़्रिजरेटर के पिछले हिस्से द्वारा बिजली के प्लग का कुचलना या क्षतिग्रस्त न होना सुनिश्चित करें।

• पैकिंग सामग्रियों को बच्चों की पहुँच से दूर रखें।

- यदि बच्चे उन्हें सिर पर पहनें तो दम घुटने से मौत होने का ख़तरा रहता है।

• उपकरण इस प्रकार रखना चाहिए कि स्थापना के बाद प्लग तक आसानी से पहुँचा जा सके।

• रेफ़्रिजरेटर ग्राउंड किया गया होना चाहिए।

- बिजली के लीकेज को रोकने या रेफ़्रिजरेटर से वर्तमान लीकेज के कारण बिजली के झटके से बचने के लिए आपको रेफ़्रिजरेटर को ग्राउंड कर देना चाहिए।

• यदि बिजली का तार क्षतिग्रस्त हो, तो इसे निर्माता या किसी सर्विस एजेंट द्वारा तत्काल बदलवाएँ।

• रेफ़्रिजरेटर पर लगा फ्यूज़ योग्य तकनीशियन या सर्विस कंपनी द्वारा ही बदला जाना चाहिए।

- ऐसा करने में विफल रहने पर बिजली का झटका या निजी चोट लग सकती है।

सावधानी स्थापना के लिए सावधानी चिह्न

- उपकरण की अंदरूनी जगह या आधार संरचना में मौजूद वायुसंचार छिद्र में किसी भी तरह की रुकावट न आने दें।
- स्थापना के बाद उपकरण को 2 घंटे तक खड़ा रहने दें।

चेतावनी उपयोग के लिए गंभीर चेतावनी संकेत

- गीले हाथों से बिजली का प्लग न लगाएँ।
- उपकरण के ऊपर कोई सामान न रखें।
- जब आप दरवाजा खोलते या बंद करते हैं, तो सामान गिर सकते हैं तथा उससे शारीरिक चोट लग सकती है और/या उपकरण क्षतिग्रस्त हो सकता है।
- पानी से भरा कंटेनर रेफ्रिजरेटर पर न रखें।
- इसके छलकने से आग या बिजली के झटके का खतरा हो सकता है।
- बच्चों को दरवाज़े से लटकने ना दें। अन्यथा, गंभीर चोट लग सकती है।
- बच्चों को रेफ्रिजरेटर के अंदर प्रवेश करने न दें। बच्चों के फँस जाने का जोखिम रहता है।
- डिस्पेंसर के छिद्र में उंगलियाँ या अन्य वस्तुएँ कभी न डालें।
- इससे निजी चोट लग सकती है या सामग्री की क्षति हो सकती है।
- वाष्पशील या ज्वलनशील पदार्थों को रेफ्रिजरेटर में स्टोर न करें।
- बेन्ज़ीन, थिनर, शराब, ईथर, एल.पी. गैस और इस तरह के अन्य उत्पादों का भंडारण विस्फोट का कारण बन सकता है।
- औषधीय उत्पादों, वैज्ञानिक सामग्रियों या तापमान के प्रति संवेदनशील उत्पादों तो रेफ्रिजरेटर में स्टोर ना करें।
- ऐसे उत्पादों को रेफ्रिजरेटर में नहीं रखा जाना चाहिए जिनके लिए सख्त तापमान नियंत्रणों की आवश्यकता होती है।
- रेफ्रिजरेटर के अंदर बिजली के उपकरण को न रखें या उनका उपयोग न करें, बशर्ते कि वे निर्माता द्वारा अनुशंसित श्रेणी के हों।
- विहिमीकरण प्रक्रिया को तेज करने के लिए निर्माता द्वारा अनुशंसित मशीनी उपकरण या किसी दूसरे उपाय के अलावा किसी अन्य उपकरण या उपाय का उपयोग न करें।
- प्रशीतक सर्किट को क्षति न पहुँचाएँ।

- रेफ्रिजरेटर का वियोजन या मरम्मत स्वयं न करें।
- आपके लिए आग, ख़राबी और/या शारीरिक चोट का ख़तरा रहता है।

- बच्चों पर नज़र रखनी चाहिए ताकि सुनिश्चित हो कि वे उपकरण के साथ न खेलें।
- बोतलों को एकदम सटाकर रखना चाहिए ताकि वे गिर न जाएँ।
- यह उत्पाद घरेलू परिवेश में केवल खाद्य पदार्थ के भंडारण के लिए नियत है।
- एक गैस रिसाव का पता चला है, तो किन्हीं नग्न लपटें या प्रज्वलन के संभावित स्रोतों से और कमरे में हवा से बचें जहाँ उपकरण कई मिनट के लिए खड़ा हो।
- केवल निर्माता या सर्विस एजेंट द्वारा प्रदान किए गए LED लैंप का ही उपयोग करें।

- यदि आपको दवा या धुएँ की गंध महसूस हो तो तुरंत पॉवर प्लग बाहर खींचें और अपने सैमसंग इलेक्ट्रॉनिक्स सेवा केंद्र से संपर्क करें।
- यदि आप लाइट बदलने में परेशानी महसूस करते हैं, तो सर्विस एजेंट से संपर्क करें।
- अगर उत्पादों में LED लैंप लगी हैं, तो स्वयं लैंप कवर या LED लैंप को न खोलें।

- कृपया अपने सर्विस एजेंट से संपर्क करें।

सावधानी उपयोग के लिए सावधानी संकेत

- उत्पाद से सर्वश्रेष्ठ कार्य-निष्पादन पाने के लिए,

- खाद्य पदार्थों को उपकरण के पिछले भाग में निकासों के सामने बहुत पास न रखें क्योंकि इससे रेफ्रिजरेटर कंपार्टमेंट में स्वतंत्र वायु संचार बाधित हो सकता है।
- भोजन को रेफ्रिजरेटर में रखने से पहले उचित तरीके से ढकें या किसी वायुरुद्ध पात्र में रखें।

- पानी की टंकी, पानी के क्यूब केवल पीने-योग्य पानी से ही भरें।
- काँच की सतह पर तेज़ झटका या अत्यधिक बल न लगाएँ।

- टूटे काँच से निजी चोट और/या संपत्ति को क्षति हो सकती है।

- सावधान रहें कि अंगुलियाँ न फँसें।

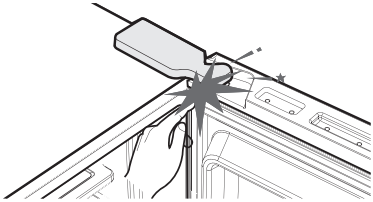

• यदि रेफ़्रिजरेटर पानी से क्षतिग्रस्त हुआ है, तो पॉवर प्लग बाहर खींचें और अपने सैमसंग इलेक्ट्रॉनिक्स सेवा केंद्र से संपर्क करें।

सावधानी सफ़ाई के लिए सावधानी संकेत

• रेफ़्रिजरेटर के अंदर या बाहर पानी का सीधा छिड़काव न करें।

- इससे आग या बिजली के झटके का खतरा होता है।

• रेफ़्रिजरेटर के पास ज्वलनशील गैस का स्प्रे न करें।

- विस्फ़ोट होने या आग लगने का जोखिम है।

• प्रदर्शन पर सफाई उत्पादों को सीधे स्प्रे न करें।

- प्रदर्शन पर लगे मुद्रित पत्र छूट सकते हैं।

• बिजली के प्लग के पिन से बाह्य पदार्थ या धूल को निकालें।
लेकिन प्लग साफ करने, बिजली के प्लग के पिन से बाह्य पदार्थ या धूल को निकालने के लिए गीले या नम कपड़े का उपयोग न करें।

- अन्यथा इससे आग या बिजली के झटके का खतरा होता है।

• सफ़ाई एवं रखरखाव करने से पहले रेफ़्रिजरेटर का प्लग हटाएँ।

चेतावनी निपटान के लिए गंभीर चेतावनी संकेत

• इस या अन्य रेफ़्रिजरेटर/रों का निपटान करते समय, दरवाज़ा/दरवाज़े के सील, कुंडी हटाएँ ताकि बच्चे या जानवर अंदर न फँस सकें।
बच्चों पर निगरानी रखनी चाहिए ताकि सुनिश्चित हो सके कि वे उपकरण के अंदर प्रवेश नहीं करते और उसके साथ खेलते नहीं हैं।

• कृपया इस उत्पाद की पैकेजिंग सामग्री का निपटान पर्यावरण-अनुकूल तरीके से करें।

• शेल्फ़ को यथा स्थान रखें ताकि बच्चे आसानी से अंदर न चढ़ सकें।
निपटान से पहले सुनिश्चित करें कि उपकरण के पीछे वाली कोई नली क्षतिग्रस्त नहीं है।

• R-600a या R-134a का रेफ़्रिजरेंट के रूप में उपयोग किया जाता है।
आपके रेफ़्रिजरेटर में किस रेफ़्रिजरेंट का उपयोग किया गया है, यह जानने के लिए उपकरण के पीछे कम्प्रेसर लेबल या रेफ़्रिजरेटर की अंदरूनी रेटिंग लेबर की जाँच करें।
जब इस उत्पाद में ज्वलनशील गैस (रेफ़्रिजरेंट R-600a) हो, तो इस उत्पाद के सुरक्षित निपटान के संबंध में अपने स्थानीय प्राधिकारी से संपर्क करें।
इंसुलेशन ब्लोइंग गैस के रूप में साइक्लोपेंटेन का उपयोग किया जाता है।
इंसुलेशन सामग्री में मौजूद गैस के लिए विशेष निपटान प्रक्रिया की आवश्यकता है।
पर्यावरण की दृष्टि से इस उत्पाद के सुरक्षित निपटान के संबंध में अपने स्थानीय अधिकारियों से संपर्क करें।
निपटान से पहले सुनिश्चित करें कि उपकरण के पीछे की कोई नली क्षतिग्रस्त नहीं है।
नलियों को ख़ुली जगह पर तोड़ना होगा।

- यदि इस उपकरण में आइसोब्यूटेन रेफ्रिजरेंट(R-600a) शामिल है, जो कि उच्च पर्यावरणीय संगतता वाली प्राकृतिक गैस है, तथापि यह ज्वलनशील भी होती है।
  उपकरण के स्थानांतरण एवं स्थापना के दौरान प्रशीतन सर्किट के किसी भी भाग का क्षतिग्रस्त न होना सुनिश्चित करने के लिए सावधानी बरतनी चाहिए।
- पाइप से रिसने वाले रेफ्रिजरेंट से आग लग सकती है या आँखों को चोट पहुँच सकती है।
  यदि रिसाव का पता लगता है, तो अग्नि या प्रज्वलन के संभावित स्रोत से बचें और उपकरण वाले कमरे में कुछ समय तक हवा आने दें।

- प्रशीतन सर्किट में रिसाव होने की स्थिति में ज्वलनशील गैस-हवा के मिश्रण के निर्माण से बचने के लिए, उस कमरे का आकार ,जहाँ उपकरण रखा जाएगा, प्रयुक्त रेफ्रिजरेंट की मात्रा पर निर्भर करता है।
  कभी क्षति के कोई लक्षण दिखने पर उपकरण चालू न करें।
  यदि संदेह हो, तो अपने डीलर से संपर्क करें.
  उपकरण के अंदर R-600a के प्रत्येक 8 ग्रा. पर कमरे का आकार 1 m^3 होना चाहिए।
  आपके विशेष उपकरणों में रेफ्रिजरेंट की मात्रा उपकरण के अंदर पहचान प्लेट पर दर्शाई गई है।

उचित उपयोग के लिए अतिरिक्त युक्तियाँ

- बिजली चले जाने की स्थिति में अपनी बिजली कंपनी के स्थानीय कार्यालय में कॉल करें और पूछें कि यह कब तक आएगी।
- एक या दो घंटे में ठीक हो जाने वाली अधिकांश बिजली की कटौतियाँ आपके रेफ्रिजरेटर के तापमान को प्रभावित नहीं करेगी।
  तथापि, बिजली न रहने पर आपको दरवाज़ा खोलने की संख्या को कम करना होगा।
- अगर रेफ्रिजरेटर के साथ चाबियाँ प्रदान की गई हैं, तो चाबियों को बच्चों की पहुँच से दूर रखना चाहिए और इन्हें उपकरण के पास नहीं छोड़ना चाहिए।
- जब उपकरण को अधिक समय तक तापमान की उस सीमा के अंतिम शीत बिंदु पर चलाया जाता है जिसके लिए उसे डिज़ाइन किया गया है, तो हो सकता है कि उपकरण संगत रूप से (रेफ्रिजरेटर में तापमान बहुत गर्म होने की संभावना) कार्य न करे।
- ऐसे भोजन को संग्रहीत न करें जो कम तापमान पर खराब हो जाता है, जैसे केले, खरबूजे।
- आपका उपकरण तुषार मुक्त है, जिसका अर्थ है कि अपने उपकरण को मैन्युअल रूप से विहिमीकृत करने की आवश्यकता नहीं है, क्योंकि यह स्वचालित रूप से हो जाएगा।
- जहाँ दो सितारा प्रतीक है, वहाँ दो सितारा खंड (खंडों) या कंपार्टमेंट अथवा डिब्बे (डिब्बों) का तापमान
  (**) अन्य फ्रीज़र कंपार्टमेंट से थोड़ा अधिक होता है।
  दे सितारा खंड या डिब्बा, अनुदेश और/या डिलीवरी के समय की स्थिति पर आधारित है।

बिजली की बचत करने की युक्तियाँ

- उपकरण को पर्याप्त हवा वाले एक ठंडे, सूखे कमरे स्थापित करें।
  सुनिश्चित करें कि यह सीधे सूर्य के प्रकाश के संपर्क में नहीं आ रहा है और कभी भी इसे गर्मी के प्रत्यक्ष स्रोत (उदाहरण के लिए रेडिएटर) के पास न रखें।
- उपकरण के निकासों या जालियों को कभी अवरोधित न करें।
- गर्म भोजन को उपकरण में रखने से पहले भोजन को ठंडा होने दें।
- पिघलाने के लिए जमे हुए भोजन को रेफ़्रिजरेटर में रखें।
  तब आप रेफ़्रिजरेटर में भोजन को ठंडा करने के लिए जमे उत्पादों के निम्न तापमानों का उपयोग कर सकते हैं।
- भोजन रखते या बाहर निकालते समय उपकरण के दरवाज़े को बहुत देर तक खोलकर न रखें।
  आप जितने कम समय के लिए दरवाज़ा खोलेंगे, फ़्रीजर में उतनी कम बर्फ जमेगी।
- रेफ़्रिजरेटर का पिछला हिस्सा नियमित रूप से साफ़ करें।
  धूल से ऊर्जा की खपत बढ़ जाती है।
- तापमान को आवश्यकता से अधिक ठंडे पर सेट न करें।
- रेफ़्रिजरेटर के नीचे और उसकी पिछली दीवार पर पर्याप्त वायु निकास सुनिश्चित करें।
  वायु निकास छिद्रों को न रोकें।
- स्थापना करते समय दाईं, बाईं, पीछे और ऊपर की ओर खाली स्थान छोड़ें।
  इससे आपको बिजली की खपत को कम करने में सहायता मिलेगी और आपके बिजली के बिल कम रहेंगे।
- ऊर्जा के सबसे प्रभावी उपयोग के लिए, कृपया भीतर की सभी फिटिंग जैसे टोकरी, दराज, शेल्फ़ को उसी स्थान पर रखें जैसा निर्माता द्वारा आपूर्ति किया गया है।

यह उपकरण केवल घरेलू या इसी प्रकार के स्थानों पर उपयोग किए जाने के लिए बनाया गया है, जैसे कि

- दुकानों, कार्यालयों और अन्य कार्यस्थलों में कर्मचारियों के लिए बने रसोईघरों में;
- फ़ार्म हाउस में और होटलों, मोटलों और अन्य आवासीय स्थानों पर क्लाइंट द्वारा;
- विश्राम और खान-पान वाले परिवेश में;
- केटरिंग और इसी प्रकार के गैर-खुदरा स्थानों पर।

अपने रेफ़्रिजरेटर को सेट करना

रेफ़्रिजरेटर को स्थापित करने के लिए तैयार होना

Samsung रेफ़्रिजरेटर खरीदने पर आपको बधाई।
हम आशा करते हैं कि आप बहुत सी अत्याधुनिक सुविधाओं और क्षमताओं का आनंद लेंगे जो यह नया उपकरण आपको प्रदान करेगा।

चेतावनी

- यह रेफ़्रिजरेटर उचित तरीके से स्थापित किया जाना चाहिए और उपयोग से पूर्व पुस्तिका के अनुसार अवस्थित होना चाहिए।

- इस उपकरण का उपयोग इस निर्देश पुस्तिका में वर्णित नियत उद्देश्य के लिए ही करें।
- हम सशक्त अनुशंसा करते हैं कि कोई भी सर्विस योग्य व्यक्ति द्वारा ही की जाए।
- कृपया इस उत्पाद की पैकेजिंग सामग्री का निपटान पर्यावरण-अनुकूल तरीके से करें।
- रेफ़्रिजरेटर की आंतरिक लाइट बदलने के पहले बिजली के प्लग को सॉकेट से बाहर खींच लें।

- अन्यथा इससे बिजली के झटके का खतरा होता है।

रेफ़्रिजरेटर के लिए सर्वोत्तम स्थान का चयन करना

- ऐसे स्थान का चयन करें जहाँ सूर्य का प्रकाश सीधा न पड़ता हो।
- किसी समतल (या लगभग समतल) सतह वाले स्थान का चयन करें।
- किसी ऐसे स्थान का चयन करें जहाँ रेफ़्रिजरेटर के दरवाज़े आसानी से खुल सकें।
- रेफ़्रिजरेटर को समतल सतह पर स्थापित करने के लिए पर्याप्त स्थान रखें।

- यदि रेफ़्रिजरेटर समतल नहीं है, तो हो सकता है कि आंतरिक कूलिंग सिस्टम सही तरीके से काम न करे।
- उपयोग के लिए आवश्यक संपूर्ण स्थान।
  नीचे दिए अनुसार आरेख और आयाम देखें।

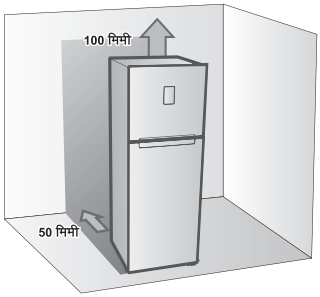

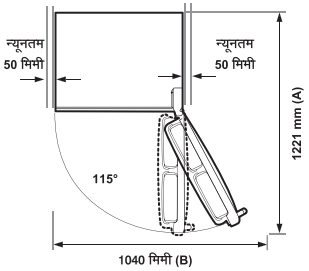

ऊपर दिया चित्र RT36* प्रदर्शित करता है।

Model	A	B
RT27	1141	964
RT29	1141	964
RT33	1221	1040
RT36	1221	1040

हवा के परिसंचरण के लिए दाएँ, बाएँ, पीछे और ऊपर पर्याप्त ख़ाली जगह छोड़ें।
यह बिजली की खपत को कम करने और आपके बिजली का बिल कम रखने में मदद मिलेगी।
जहाँ तापमान 10 °C से नीचे जाने की संभावना हो, वहाँ रेफ़्रिजरेटर स्थापित न करें।
कृपया उपकरण की मरम्मत और सेवा के लिए आसानी से गतिशील करने की स्थिति सुनिश्चित करें।

सावधानी

रेफ़्रिजरेटर के पीछे के भाग को स्थापित, सर्विस या साफ़ करते समय इकाई को सीधे बाहर खींचना और कार्य समाप्त कर लेने के बाद इसे सीधे वापस धकेलना सुनिश्चित करें।
साथ-ही, यह सुनिश्चित करें कि आपकी सतह पूरी तरह भरे रेफ़्रिजरेटर का समर्थन करती हो।
अन्यथा, इससे सतह क्षतिग्रस्त हो सकती है।

सावधानी

बिजली के अतिरिक्त तार को कृपया रेफ़्रिजरेटर के पीछे बाँध दें, ताकि वे सतह से स्पर्श न करें और स्थानांतरित करते समय बिजली के तार रोलर द्वारा कुचले न जाएँ।

सतह

उचित स्थापना के लिए, रेफ़्रिजरेटर को ऐसी समतल, ठोस-पदार्थ की सतह पर रखा जाना चाहिए जिसकी ऊँचाई बाकी सतह के समान हो।
यह सतह पूरी तरह से (या लगभग 100 कि.ग्रा.) भरे रेफ़्रिजरेटर का समर्थन करने में सक्षम होनी चाहिए।
तल की फ़िनिश को सुरक्षित करने के लिए, कार्डबोर्ड के डब्बे का एक बड़ा भाग काटें और उसे रेफ़्रिजरेटर के नीचे उस स्थान रखें जहाँ आप काम कर रहे हैं।

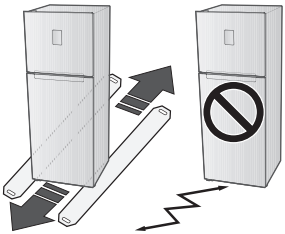

रेफ़्रिजरेटर को खींचने या ढकेलने से सतह क्षतिग्रस्त हो सकती है।
रेफ़्रिजरेटर को स्थापित करने के बाद उसे स्थानांतरित करने से सतह क्षतिग्रस्त हो सकती है।

रेफ़्रिजरेटर को समतल करना

यदि उपकरण का सामने का भाग, पिछले भाग से थोड़ा सा ऊँचा हो, तो दरवाज़ा अधिक आसानी से खोला और बंद किया जा सकता है।

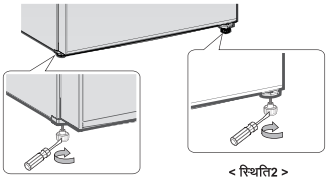

< स्थिति1 > < स्थिति2 >

स्थिति 1) उपकरण बाईं ओर झुक जाता है।

- बाएँ समायोजन पाये को तीर की दिशा में तब तक घुमाएँ, जब तक कि उपकरण समतल नहीं हो जाता।

स्थिति 2) उपकरण दाईं ओर झुक जाता है।

- दाएँ समायोजन पाये को तीर की दिशा में तब तक घुमाएँ, जब तक कि उपकरण समतल नहीं हो जाता।

रेफ़्रिजरेटर सेट करना

अब जब आपका नया रेफ़्रिजरेटर अपने स्थान पर स्थापित है, तो आप सेट करने और इस उपकरण के सुविधाओं और कार्यों का आनंद उठाने के लिए तैयार हैं।
निम्न चरणों को पूरा करके, आपका रेफ़्रिजरेटर पूरी तरह से संचालनीय होना चाहिए।
अगर ऐसा नहीं है, तो पहले बिजली की आपूर्ति और बिजली के स्रोत जाँचें या इस उपयोगकर्ता मार्गदर्शिका के अंत में दिया गया समस्या-निवारण अनुभाग देखें।
अगर आपके कोई और प्रश्न हैं, तो अपने सैमसंग इलेक्ट्रॉनिक्स सेवा केंद्र से संपर्क करें।

1. रेफ़्रिजरेटर को किसी उपयुक्त स्थान पर रखें जहाँ दीवार और रेफ़्रिजरेटर के बीच पर्याप्त ख़ाली जगह हो।
   इस मैनुअल के स्थापना अनुदेशों को देखें।
2. एक बार रेफ़्रिजरेटर प्लग कर दिए जाने पर, सुनिश्चित करें कि आपके द्वारा दरवाज़ा खोलने पर भीतर की लाइट जल जाती है।

तापमान नियंत्रक को सबसे ठंडे तापमान पर सेट करें और एक घंटे तक प्रतीक्षा करें।
फ़्रीज़र को थोड़ा ठंडा हो जाना चाहिए और मोटर को सुचारू रूप से चलना चाहिए।
रेफ़्रिजरेटर को चालू करने के बाद, इसे उचित तापमान पर पहुँचने में कुछ घंटे लगेंगे।
जब रेफ़्रिजरेटर का तापमान पर्याप्त रूप से ठंडा हो जाए, तो आप रेफ़्रिजरेटर में भोजन और पेय पदार्थ रख सकते हैं।

आपके रेफ़्रिजरेटर का संचालन

नियंत्रण कक्ष का उपयोग करना (प्रदर्शन प्रकार)

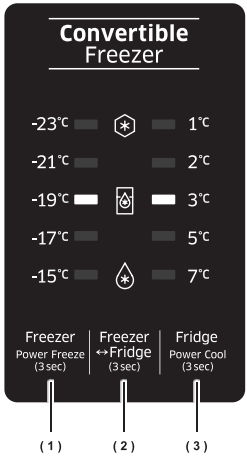

आपके द्वारा हर बार बटन दबाए जाने पर, एक लघु बीप की ध्वनि आएगी।

प्रत्येक बटन को दबाने के बाद तापमान 10 अनुभागों के बाद सेट हो जाएगा।

(1) Freezer (फ़्रीज़र)

1. Freezer (फ़्रीज़र)

- फ़्रीज़र को -15 °C और -23 °C के बीच के वाँछित तापमान पर सेट करने के लिए Freezer (फ़्रीज़र) बटन दबाएँ।
  डिफ़ॉल्ट रूप से तापमान -19 °C पर सेट होता है और Freezer (फ़्रीज़र) बटन को बार-बार दबाने से तापमान अगले क्रम में बदलता जाता है और तापमान संकेतक वाँछित तापमान प्रदर्शित करता है।

-23 °C → -15 °C → -17 °C → -19 °C → -21 °C

2. Power Freeze (पॉवर फ़्रीज़)

- जब आप 3 सेकंड तक के लिए Freezer (फ़्रीज़र) बटन दबाते हैं, तो संकेतक प्रकाशित हो जाता है और रेफ़्रिजरेटर, फ़्रीज़र में रखी चीज़ों को कम समय में तथा तेज़ी से फ़्रीज़ करता है।

जब आप Power Freezer (पॉवर फ़्रीज़) फ़ंक्शन का उपयोग करते हैं, तो रेफ़्रिजरेटर की कूलिंग में कई घंटे तक की तेज़ी आ जाती है।
जब आप इस फ़ंक्शन का उपयोग करते हैं, तो ऊर्जा की खपत में वृद्धि हो जाती है।
इस फ़ंक्शन को निष्क्रिय करने के लिए, Freezer (फ़्रीज़र) बटन को 3 सेकंड तक के लिए दबाएँ।

(2) Freezer (फ़्रीज़र) → Fridge (फ़्रिज़) (3 सेकंड)

जब आप फ़्रीज़र रूम को फ़्रिज रूम और फ़्रीज़र में रूपांतरित करने के लिए इस बटन को 3 सेकंड तक के लिए दबाते हैं, तो प्रदर्शन बंद हो जाएगा।
इस फ़ंक्शन का उपयोग करते हुए आप Power Freezer (पॉवर फ़्रीज़र) फ़ंक्शन का उपयोग नहीं कर सकते।
इस फ़ंक्शन को निष्क्रिय करने के लिए, इस बटन को 3 सेकंड तक के लिए दबाएँ।

चेतावनी

विस्फोट का ख़तरा

जब आपको इस फ़ंक्शन को रद्द करना हो, तो जमने वाले द्रव को काँच की बोतल में रखकर फ़्रीज़र रूम में कभी भी संग्रहीत नहीं करना चाहिए।

जब आप फ़्रीज़र रूम को fridge mode (फ़्रिज मोड) में परिवर्तित करने के लिए उपयोग करते हैं, तो हम खाद्य सामग्री (विशेष रूप से सब्ज़ी) को प्लास्टिक के डिब्बे या बॉक्स में रखने की सलाह देते हैं.

(3) Fridge (फ़्रिज)

1. Fridge (फ़्रिज)

- फ़्रिज को 1 °C से लेकर 1 °C और 7°C के बीच के वाँछित तापमान पर सेट करने के लिए Fridge (फ़्रिज) बटन दबाएँ।
  डिफ़ॉल्ट रूप से तापमान 3 °C पर सेट होता है और Fridge (फ़्रिज) बटन को बार-बार दबाने से तापमान अगले क्रम में बदलता जाता है और तापमान संकेतक वाँछित तापमान प्रदर्शित करता है।

2. Power Cool (पॉवर कूल)

- जब आप 3 सेकंड तक के लिए Fridge (फ़्रिज) बटन दबाते हैं, तो संकेतक प्रकाशित हो जाता है और रेफ़्रिजरेटर की गति में तेज़ी आ जाती है।

अगर आपको भारी मात्रा में खाद्य सामग्री फ़्रीज़ करने की आवश्यकता है, तो कम से कम 24 घंटे पहले Power Freezer (पॉवर फ़्रीज़र) फ़ंक्शन को सक्रिय कर दें।

Fridge (फ़्रिज) के तापमान को समायोजित करना

अगर रेफ़्रिजरेटर में भोजन आपकी पसंद के अनुसार ठंडा नहीं होता है या अगर आप रेफ़्रिजरेटर का तापमान और कम करना चाहते हैं, तो तापमान को 1 °C पर सेट कर दें।
अगर रेफ़्रिजरेटर में भोजन जम गया है या अगर आप रेफ़्रिजरेटर का तापमान बढ़ाना चाहते हैं, तो तापमान को 3 °C और 7 °C के बीच सेट कर दें।

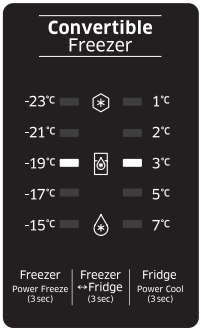

- अगर कमरे के तापमान 10 °C से कम है, तो तापमान को 5 °C और 7 °C के बीच में सेट न करें।
  अन्यथा रेफ़्रिजरेटर के प्रदर्शन में समस्या आ सकती है।
- कमरे का तापमान 35 °C से अधिक होने पर, तापमान को 1 °C और 2 °C के बीच में सेट न करें।
  अन्यथा रेफ़्रिजरेटर के प्रदर्शन में समस्या आ सकती है।

बर्फ़ तैयार करना (वैकल्पिक)

आइस मेकर को ट्वस्ट करें

आइस क्यूब तैयार करना

आइस ट्रे को अपनी ओर खींचते हुए हटाएँ।
ट्रे के पिछले हिस्से में अंकित अधिकतम पानी के स्तर तक ट्रे में पानी भरें।
पानी को न छलकने देने की सावधानी बरतते हुए, ट्रे को वापस होल्डर में स्लाइड करें।
आइस क्यूब तैयार होने की प्रतीक्षा करें।

आइस क्यूब हटाना

सुनिश्चित करें कि आइस क्यूब स्टोरेज बिन, आइस क्यूब ट्रे के नीचे सही जगह पर है। यदि नहीं, तो सही जगह खिसकाएँ।

किसी एक लीवर को मजबूती से घड़ी की सुई की दिशा में घुमाएँ जब तक कि ट्रे हल्के से मुड़ न जाए।

परिणाम : आइस क्यूब स्टोरेज बिन में गिर जाएँगे।

यदि आवश्यक हो, तो ट्रे के दूसरे आधे भाग के लिए चरण 2 दोहराएँ। निम्नतः स्टोरेज बिन हटाएँ:

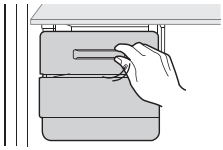

- उसे थोड़ा ऊपर उठाते हुए
- अपनी ओर खींचते हुए

सावधानी

विस्फोट का ख़तरा

द्रव से भरी काँच की बोतलों को फ़्रीज़र में कभी-भी संग्रहीत नहीं किया जाना चाहिए क्योंकि सामग्री के फ़्रीज़ हो जाने पर काँच टूट कर बिखर सकता है।

ट्रे टाइप (वैकल्पिक)

आइस क्यूब तैयार करना

आइस ट्रे को, ट्रे के पिछले हिस्से में अंकित अधिकतम पानी के स्तर तक पानी से भरें।
आइस ट्रे को फ़्रीज़र में रखें।

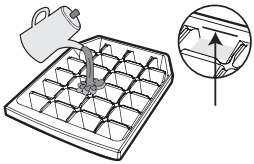

आइस क्यूब हटाना

आइस ट्रे के दोनों सिरों को पकड़ें, उसे हल्के से घुमाते हुए ट्रे से आइस क्यूब हटाएँ।

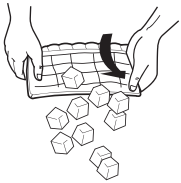

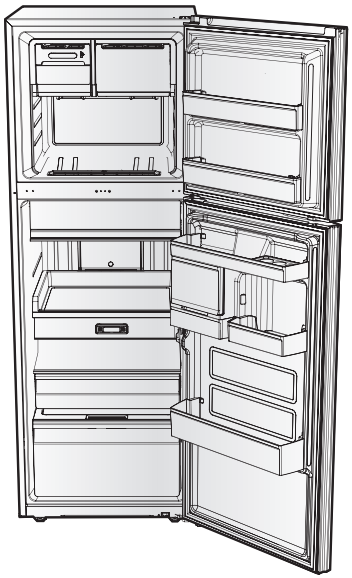

चित्र के कुछ भाग मॉडल और विकल्प के आधार पर आपके रेफ़्रिजरेटर से भिन्न हो सकते हैं (उदाहरण के लिए आइस ट्रे, दुगुना आइस मेकर, कूल पैक या शेल्फ़)।

चेतावनी

- यदि आप काफ़ी समय के लिए दूर जाने की योजना बना रहे हैं, तो रेफ़्रिजरेटर ख़ाली करें और उसे बंद कर दें।
  उपकरण की अंदरूनी अधिक नमी को पोंछ दें और दरवाज़ों को खुला रखें।
  यह दुर्गंध तथा फफूंद विकसित न होने में मदद करता है।
- यदि लंबे समय तक रेफ़्रिजरेटर का उपयोग नहीं होगा, तो बिजली का प्लग निकाल दें।

- फ़्रीज़र कंपार्टमेंट में अधिक ख़ाली जगह पाने के लिए, आप कूल पैक, शेल्फ़, ट्विस्ट आइस मेकर, आइस स्टोरेज बिन और उनके सहायक जैसे प्रयोज्य फ़िटिंग हटा सकते हैं, जिन्हें बिना किसी औजार के हटाया जा सकता है।
  यह ऊष्मीय और यांत्रिकीय विशेषताओं को प्रभावित नहीं करता है।
  उपर्युक्त चीज़ों को हटाने पर फ़्रीज़र कंपार्टमेंट के घोषित स्टोरेज मात्रा की गणना की जाती है।
- यदि आप दोनों आइस मेकर किट हटाना चाहते हैं, तो आपको पहले दायाँ हटाना होगा।
  (केवल आइस मैक्स विकल्प मॉडल के लिए)
- इस उत्पाद की सर्वोत्तम ऊर्जा क्षमता पाने के लिए, कृपया सभी स्लीव्ज़, ड्राअर्स और बास्केट को उनकी मूल स्थिति में 17 पृष्ठ के चित्र जैसा छोड़ें।
- फ़्रीज़र कंपार्टमेंट का निचला गार्ड केवल दो सितारा खंड है।
  इसलिए, उचित कार्य-निष्पादन के लिए निचले गार्ड को मूल स्थिति पर रखा जाएगा।
- डिस्प्ले मॉडल का अलार्म फ़ंक्शन फ़्रिज का दरवाज़ा खुला रहने पर काम करता है।
  कृपया साथ ही जाँच करें कि फ़्रीज़र का दरवाज़ा बंद है या नहीं, क्योंकि फ़्रीज़र का दरवाज़ा खुला रहने पर अलार्म नहीं बजता है।
  ग़ैर-डिस्प्ले मॉडल के मामले में, फ़्रिज और फ़्रीज़र के दरवाज़े खुले रहने पर भी अलार्म नहीं बजता है।
  जाँच करें कि दरवाज़े बंद हैं या नहीं।

रेफ़्रिजरेटर के सहायक सामान हटाना

सावधानी

संयोजन करते समय, फ़्रीज़र शेल्फ़, रेफ़्रिजरेटर शेल्फ़ और कूल पैक को सही स्थिति में जमाएँ और उन्हें उलटा न रखें।
उससे शारीरिक चोट लग सकती है या सामग्री क्षतिग्रस्त हो सकती है।

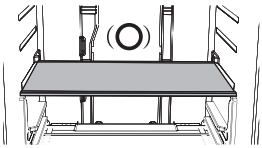



1. आइस ट्रे और बॉक्स को बाहर खींचे और फिर दाईं ओर के सपोर्ट ट्रे बर्फ़ को बाहर निकालें।
   इसी प्रकार बाईं ओर करें।
   (केवल आइस मेक्स विकल्प मॉडल के लिए)

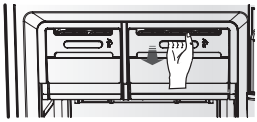

सावधानी

- आइस ट्रे सपोर्ट बाहर खींचते समय सावधानी बरतें क्योंकि वह अचानक आपकी ओर आगे बढ़ सकता है।

- आइस ट्रे सपोर्ट को वियोजित और संयोजित करते समय सावधानी बरतें क्योंकि उसके ऊपरी ओर का किनारा काफ़ी तेज़ धार वाला है। इससे उँगली को चोट पहुँच सकती है।

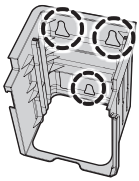

संयोजित करने के लिए, आइस ट्रे सपोर्ट को ऊपरी स्लॉट में रखें जहाँ दायाँ ओर ऊपर रहे।
उसे बीच में नीचे से पकड़ें और आइस ट्रे सपोर्ट को सही जगह पहुँचने तक धकेलें।

2. फ़्रीज़र शेल्फ़ या कूल पैक को ऊपर उठाएँ और आगे की ओर खींचे तथा फिर आइस ट्रे और बॉक्स को बाहर खींचें।
   सपोर्ट ट्रे की बर्फ़ को बाहर निकालें।
   (केवल फ़्रीज़र शेल्फ़ या कूल पैक विकल्प मॉडल के लिए)

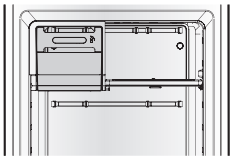

3. आइस ट्रे हटाएँ और फिर फ़्रीज़र शेल्फ़ को ऊपर उठाएँ तथा उसे आगे की ओर खींचें।
   (केवल आइस ट्रे विकल्प मॉडल के लिए)

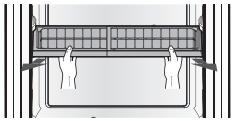

4. रेफ़्रिजरेटर के शेल्फ़ को अपनी ओर खींचें।

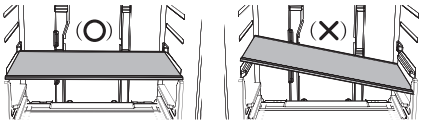

- रेफ़्रिजरेटर शेल्फ़ को हटाने के लिए, जब दरवाज़ों को चौड़ा खोलना संभव हो, तब शेल्फ़ को आगे खींचे, ऊपर उठाएँ और फिर बाहर निकालें।

- रेफ़्रिजरेटर शेल्फ़ को हटाने के लिए, जब दरवाज़ों को चौड़ा खोलना असंभव हो, तब शेल्फ़ को आगे खींचे, ऊपर उठाएँ और उन्हें झुकाएँ ताकि बाहर निकाल सकें।
- जब आप शेल्फ़ वापस रखें, तो सुनिश्चित करें कि उस पर "सामने" लेबल लगा ओर रेफ़्रिजरेटर के सामने की ओर हो।

5. कम तापमान वाले उत्प्रेरक गंधहारक पर सिल के सिरे को दबाते हुए उसे बाहर निकालें।

6. ऊपर उठाएँ और दरवाज़े के गार्ड को बाहर निकालें।

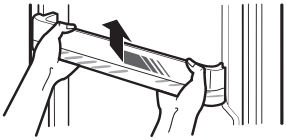

सहायक उपकरणों को निकालने से पहले, सुनिश्चित करें कि रास्ते में कोई भोजन नहीं है।
संभव होने पर दुर्घटना के जोखिम को कम करने के लिए सारे भोजन को निकाल दें।

रेफ़्रिजरेटर की सफ़ाई

चेतावनी

- सफ़ाई के लिए बेन्ज़ीन, थिनर या Clorox™ का उपयोग न करें। वे उपकरणों की सतह को नुकसान पहुँचा सकते हैं और आग का ख़तरा पैदा कर सकते हैं।

- जब रेफ़्रिजरेटर का प्लग लगा हो, तब पानी स्प्रे न करें, क्योंकि इससे बिजली का झटका लग सकता है।
  रेफ़्रिजरेटर को बेन्ज़ीन, थिनर या कार डिटर्जेंट से साफ़ न करें क्योंकि आग का जोखिम हो सकता है।

1. रेफ़्रिजरेटर की बिजली की तार को प्लग से निकाल दें।
2. मुलायम रोएँ रहित कपड़े या काग़ज़ के तौलियो को थोड़ा पानी में भिगाएँ।

रेफ़्रिजरेटर को साफ करने के लिए किसी प्रकार के डिटर्जेंट का उपयोग न करें क्योंकि वह रेफ़्रिजरेटर का रंग उड़ा सकता है या उसे क्षतिग्रस्त कर सकता है।

3. रेफ़्रिजरेटर के साफ और सूखा होने तक उसे भीतर और बाहर से पोछें।
4. रेफ़्रिजरेटर की बिजली की तार का प्लग लगाएँ।

अंदरूनी लाइट बदलना

LED लैम्प को बदलने के लिए, कृपया सेवा इंजीनियर से संपर्क करें।

समस्या-निवारण

समस्या	समाधान
उपकरण बिल्कुल कार्य नहीं कर रहा है या तापमान बहुत अधिक है।	• जाँचें कि क्या पावर प्लग ठीक से कनेक्ट है। • क्या सामने वाले पैनल पर तापमान नियंत्रण सही तरह सेट किया गया है? • क्या उपकरण को सीधे धूप में या किसी गरम स्रोत के पास रखा गया है? यदि हाँ, तो वह ठीक तरह ठंडा करने में सक्षम नहीं होगा। कृपया उसे ऐसी जगह रखें जहाँ सीधे धूप न पड़ती हो और ताप स्रोत समीप न हो। • क्या उपकरण का पिछला हिस्सा दीवार के काफ़ी नज़दीक है? यदि हाँ, तो वह ठीक तरह ठंडा करने में सक्षम नहीं होगा। उसे दीवार से समुचित दूरी पर रखें। • क्या अंदर बहुत अधिक खाद्य-सामग्री है जिससे खाद्य-पदार्थ निकास वायु-मार्ग को बाधित कर रहा है? रेफ़्रिजरेटर को उपयुक्त तापमान पर रखने के लिए, रेफ़्रिजरेटर में बहुत अधिक खाद्य-सामग्री न भरें।
रेफ़्रिजरेटर में रखा भोजन जम गया है।	• क्या सामने वाले पैनल पर तापमान नियंत्रण सबसे ठंडे तापमान पर सेट है? • क्या परिवेशी तापमान बहुत कम है? • क्या आपने फ़्रिज के सबसे ठंडे भाग में पानी की अधिक मात्रा वाला भोजन संग्रहीत किया है?
असामान्य शोर सुनाई देता है।	• जाँचें कि क्या उपकरण को किसी स्थिर, समतल सतह पर स्थापित किया गया है। • क्या उपकरण का पिछला भाग दीवार के बहुत पास है? • क्या कोई बाह्य चीज़ें उपकरण के पीछे या उसके नीचे गिरी हुई हैं? • क्या उपकरण में कंप्रेसर से शोर उत्पन्न हो रहा है? • उपकरण के अंदर एक टिक-टिक की ध्वनि सुनाई दे सकती है; यह सामान्य है। जब विभिन्न सहायक सामग्रियाँ सिकुड़ती या फैलती हैं, तो यह ध्वनि उत्पन्न होती है।
उपकरण के सामने के कोने और बाज़ू गर्म हैं और संघनन निर्मित होने लगता है।	• संघनन होने से रोकने के लिए उपकरण के सामने के कोनों पर गर्मी-रोधी पाइप स्थापित किए जाते हैं। जब आसपास का तापमान बढ़ता है, तो हो सकता है, कि यह सदैव प्रभावी न हो। हालाँकि, यह असामान्य नहीं है। • बहुत नम मौसम में, संघनन, उपकरण की बाह्य सतह पर तब हो सकता है जबकि हवा में मौजूद नमी उपकरण की ठंडी सतह के संपर्क में आती है।
आइस मेकर बर्फ़ तैयार नहीं कर रहा है।	• क्या आपने पानी की आपूर्ति की स्थापना के बाद बर्फ जमाने से पहले 12 घंटे तक प्रतीक्षा की? • क्या आपने मैनुअल रूप से बर्फ़ बनाने की प्रक्रिया को बंद किया है? • क्या फ़्रीज़र का तापमान अत्यधिक गरम है? फ़्रीज़र के तापमान को न्यून स्तर पर सेट करने की कोशिश करें। • क्या आपने वॉटर टैंक में पानी भरा है? • क्या आपने जाँच की है कि वॉटर टैंक सही तरह फ़िट किया गया है या नहीं?
पानी का डिस्पेंसर काम नहीं कर रहा है।	• क्या रेफ़्रिजरेटर का तापमान बहुत कम होने के कारण पानी की टंकी जम गई है? मुख्य डिजिटल डिस्प्ले पर कुछ अधिक गर्म सेटिंग का चयन करने का प्रयास करें। • क्या आपने वॉटर टैंक में पानी भरा है? • क्या आपने जाँच की है कि वॉटर टैंक सही तरह फ़िट किया गया है या नहीं?
आपको उपकरण में तरल पदार्थ के बुदबुदाने की आवाज़ सुनाई दे सकती है।	• यह रेफ़्रिजरेंट है, जो उपकरण के आंतरिक भाग को ठंडा करता है।

समस्या	समाधान
उपकरण के भीतर बदबू हो रही है।	• क्या कोई भोजन आइटम खराब हो गया है? • सुनिश्चित करें की तीक्ष्ण गंध वाला भोजन (उदाहरण के लिए मछली) को लपेटा गया है ताकि वह वायुरुद्ध रहे। • अपने फ़्रीज़र की आवधिक रूप से सफ़ाई करें और किसी ख़राब खाने को फेंक दें। फ़्रिज के अंदर सफाई करते समय, खाद्य सामग्री को कहीं और स्टोर करें और उपकरण का प्लग हटा दें। 2-3 घंटों के बाद सूखे डिश-क्लॉथ से पोंछें और फिर रेफ़्रिजरेटर के अंदर हवा को परिसंचरित होने दें।
उपकरण की दीवारों पर तुषार की परत मौजूद है।	• क्या निकास वायु-मार्ग रेफ़्रिजरेटर के अंदर संग्रहीत खाद्य-पदार्थों से अवरुद्ध हो गए हैं। • वायुसंचार को बेहतर बनाने के लिए अधिकाधिक खाद्य-पदार्थ बाहर निकाल दें। • यदि फ़्रीज़र की दराज़ पूरी तरह बंद न हो या अवरुद्ध हो, तो बाहरी नमी अंदर प्रवेश कर सकती है और अत्यधिक तुषार निर्मित हो सकता है।
संघनन, उपकरण के भीतर की दीवार पर और सब्ज़ियों के आस-पास होता है।	• पानी की अधिक मात्रा वाले खाद्य-पदार्थों को ढके बिना नमी के उच्च स्तर पर स्टोर किया गया है या दरवाज़ा अधिक समय तक खुला छोड़ा गया है। • खाद्य-पदार्थों को ढक कर या सीलबंद पात्रों में स्टोर करें।

परिवेशी कक्ष तापमान की सीमाएँ

इस रेफ़्रिजरेटर को रेटिंग प्लेट पर चिह्नित इसकी तापमान श्रेणी द्वारा निर्दिष्ट परिवेशी तापमानों पर संचालन करने के लिए डिज़ाइन किया गया है।

श्रेणी	प्रतीक	परिवेशी तापमान श्रेणी (°C)	
		IEC 62552 (ISO 15502)	ISO 8561
अधिक समशीतोष्ण	SN	+10 से +32	+10 से +32
समशीतोष्ण	N	+16 से +32	+16 से +32
उपोष्णकटिबंधीय	ST	+16 से +38	+18 से +38
उष्णकटिबंधीय	T	+16 से +43	+18 से +43

आंतरिक तापमान कुछ कारकों से प्रभावित हो सकते हैं जैसे कि रेफ़्रिजरेटर का स्थान, परिवेशी तापमान और आपके द्वारा दरवाज़ा खोले जाने की आवृत्ति। इन कारकों की प्रतिपूर्ति करने के लिए तापमान को आवश्यकतानुसार समायोजित करें।

इस उत्पाद का सही निपटान

(अपशिष्ट इलेक्ट्रिकल और इलेक्ट्रॉनिक उपकरण)

हिन्दी

[redacted]

(उन देशों में लागू है, जिनमें पृथक एकत्रीकरण सिस्टम हैं)

उत्पाद, सहायक उपकरणों या साहित्य पर यह चिह्नांकन यह संकेत देता है कि उत्पाद और इसके इलेक्ट्रॉनिक सहायक उपकरणों (उदा चार्जर, हेडसेट USB केबल) का निपटान उनके कार्यशील अवधि की समाप्ति पर अन्य घरेलू अपशिष्ट पदार्थों के साथ नहीं किया जाना चाहिए। अपशिष्ट के अनियंत्रित निपटान से पर्यावरण या मानव स्वास्थ्य को होने वाली संभावित हानि से बचने के लिए कृपया इन आइटम को अन्य प्रकार के अपशिष्ट से पृथक करें और सामग्री संसाधनों के दीर्घकालीन पुनः उपयोग को बढ़ावा देने के लिए उन्हें जिम्मेदारी से रिसायकल करें।

इन आइटम को पर्यावरण की दृष्टि से सुरक्षित रिसायकल हेतु ले जाने के स्थान और तरीके के विवरण के लिए घरेलू उपयोगकर्ताओं को उस खुदरा विक्रेता से, जहाँ से उन्होंने इसे खरीदा है, या अपने स्थानीय सरकारी कार्यालय से संपर्क करना चाहिए।

व्यावसायिक उपयोगकर्ताओ को उनके आपूर्तिकर्ताओं से संपर्क करना चाहिए और क्रय संविदा की नियमों और शर्तों की जाँच करनी चाहिए। इस उत्पाद को और इसके इलेक्ट्रॉनिक सहायक उपकरणों को निपटान के लिए अन्य वाणिज्यिक अपशिष्ट पदार्थों के साथ मिलाना नहीं चाहिए।

सुरक्षित निपटान और रिसाइकल करने के बारे में अधिक जानकारी के लिए हमारी वेबसाइट www.samsung.com पर जाएँ या नीचे दिए हेल्पलाइन नंबर पर SAMSUNG WORLD WIDE से संपर्क करें।

SAMSUNG

SAMSUNG WORLD WIDE से संपर्क करें

यदि Samsung उत्पादों से संबंधित आपके कोई प्रश्न या टिप्पणियाँ हैं, तो कृपया SAMSUNG के ग्राहक सेवा केंद्र से संपर्क करें।

देश	फ़ोन करें	वेबसाइट
भारत	1800 3000 8282 - टोल फ़्री 1800 266 8282 - टोल फ़्री	www.samsung.com/in/support

This product is RoHS compliant

DA68-03236A-01